



Temperature limiting adjustment P0123199 and P1023199 shower valve.



1. Remove handle.



2. Unscrew cap from valve.



3. Using a coin, screwdriver or finger nail, remove red limiting adjustment ring.



4. Rotate ring to the desired limiting position.

* To adjust limit stop, turn red ring counter clockwise for more hot water or clockwise for less hot water. +/- indicators are on the limit stop ring for easy adjusting.

Hot temperature limit stop *



Reinstall everything in reverse order