


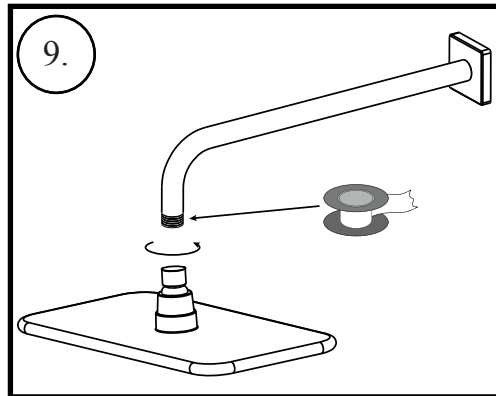
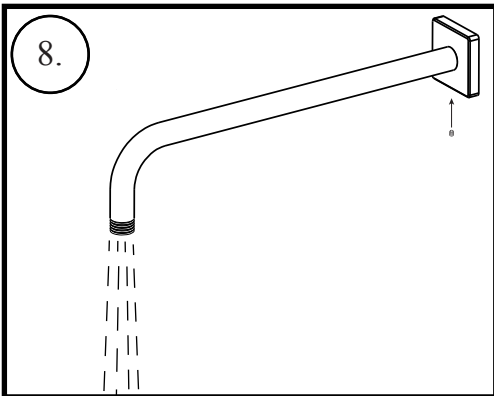
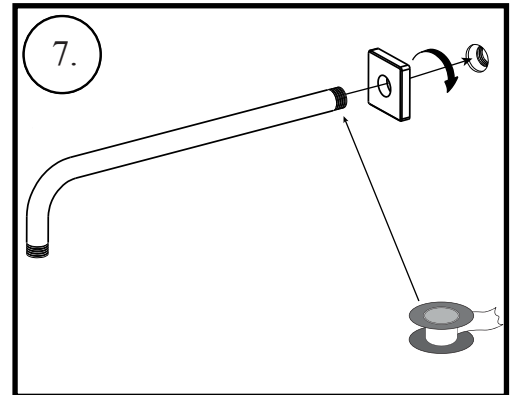
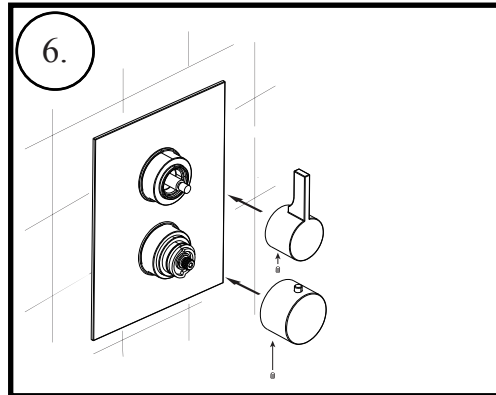
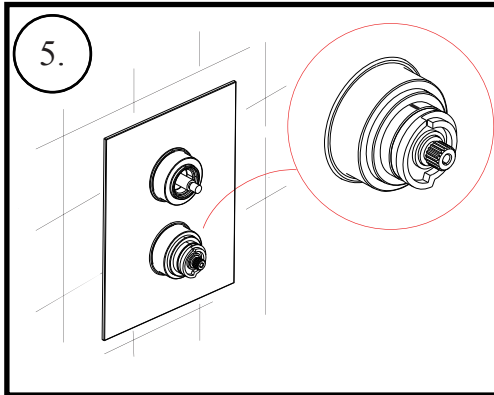
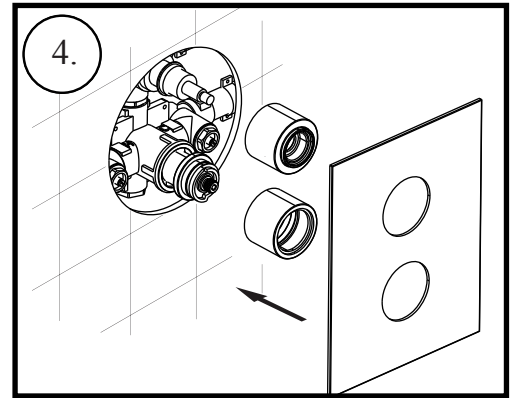
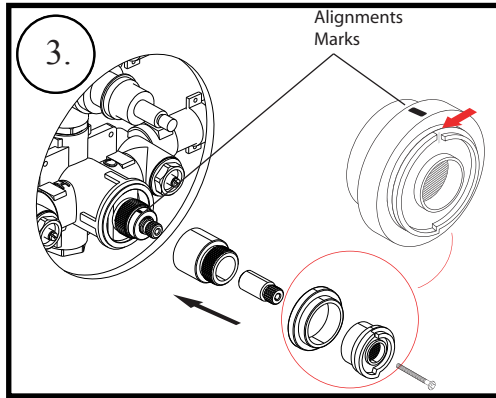
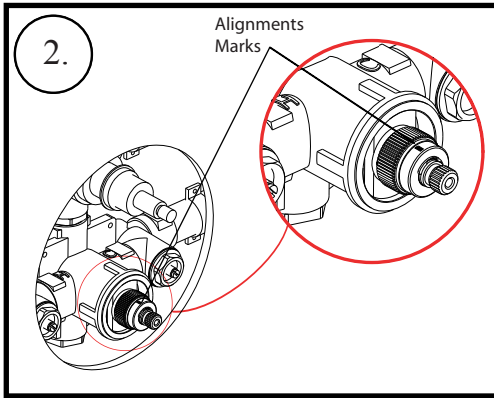


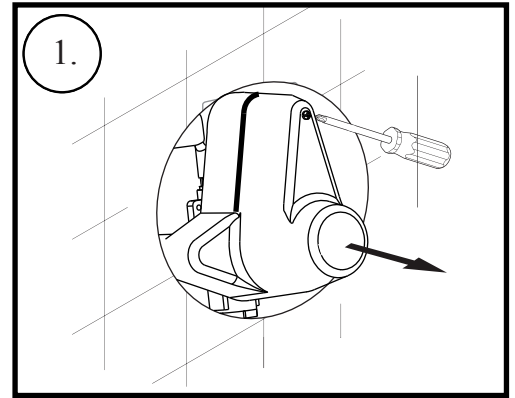

Huntington Brass Installation Instructions for: S6520301-1, S6520302-1 - Thermostatic Shower Package

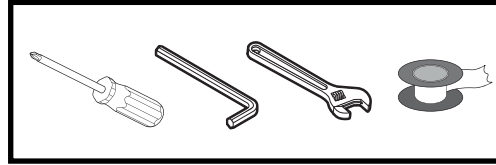

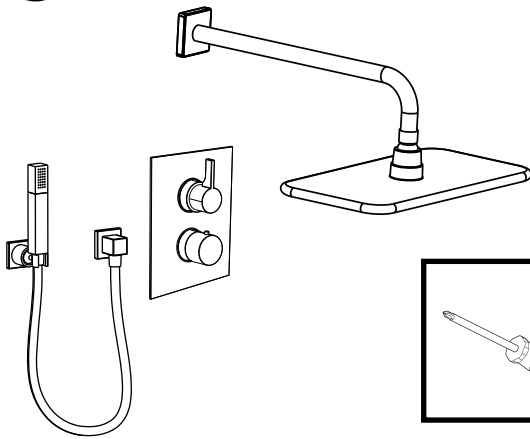

Huntington Brass Installation Instructions for: S6520301, S6520302 - Thermostatic Shower Package

